



 
Shenzhen Royear Technology Co.,Ltd

Contact: Joyce YE


Email/MSN:sales@royear.com Skype:royear_8

TEL:86-755-89250575 FAX:86-755-89250576

MANUAL OF UNIVERSAL GARAGE DOOR REMOTE

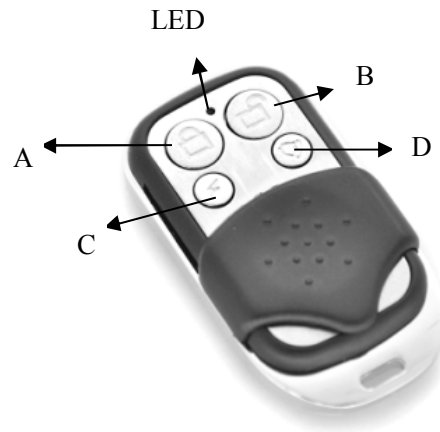

 1. Clear the code
2. Copy
3. Adjust the frequency
4. Recover previous code

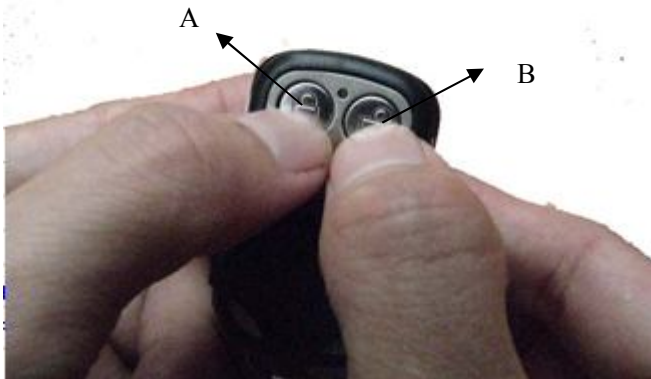

1.

Clear the code:

before delivery, we put some code for testing. When you get them , please clear the code by pushing key A and B at the same time until LED flash 3 times. Now remain key A unmoved, push key B 3 times. LED will keeping flashing, to tell the code has been cleared successfully.

*when you push the key, LED has no action.



Shenzhen Royear Technology Co.,Ltd

Contact: Joyce YE

Email/MSN:sales@royear.com Skype:royear_8

TEL:86-755-89250575 FAX:86-755-89250576

Your original remote

Remote duplicator




2.

Copy:

Put your original remote and the duplicator close to each other. Push the same key of two remotes you want to copy (For example the first key of original remote and key A of duplicator.). Then relax the key until LED of duplicator keeping flash. Other keys same operation.

* When you find it hard to copy, please change the position of two remotes. Like back to back, head to head...

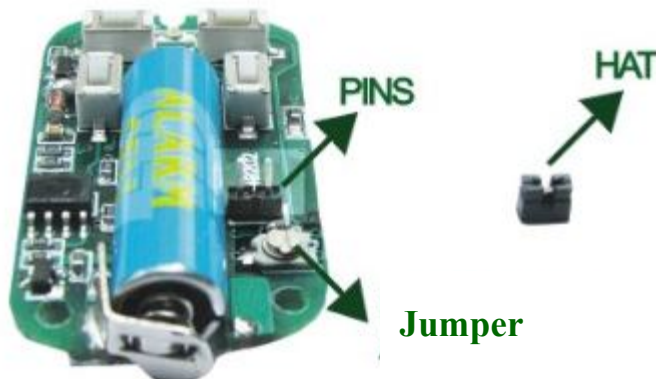

3.

remote control inner circuit

Adjust the frequency(290-450MHz)

Confirm the frequency of your original remote (a frequency counter will help). If it's same with duplicator, the remote can work directly. If not, you need to adjust frequency of the duplicator. We have 2 kinds of frequency , fix and adjustable. This step only suitable for adjustable frequency.



Shenzhen Royear Technology Co.,Ltd

Contact: Joyce YE

Email/MSN:sales@royear.com Skype:royear_8

 
TEL:86-755-89250575 FAX:86-755-89250576

Open the housing of remote control you will find a jumper, take a non-metal pen to turn around the jumper. Push any key of the remote at the same time, the frequency will show on the frequency counter. Relax the key until adjust to the right frequency you want.

Put on the hat: 270MHz - 390MHz

Put off the hat: 390MHz -450MHz

* You might find the frequency is changed after you fix the case of remote. This is because the metal case will effect the frequency. In normal case, $\pm 1-2\text{MHz}$ is acceptable.

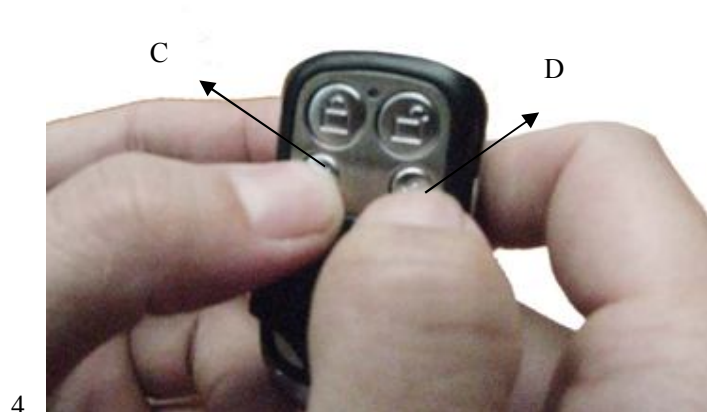

If delete the code carelessly, you can recover previous code by pushing key C and D at the same time until LED flashing fast.

* This step only suitable for remotes with 3 and 4 keys.

NOTE:

To prevent signal interference , please put all the wireless electronic equipment away when operating. Such as mobile phone, pc, ect.

Be sure the battery is fully charged.