

2 SLICE TOASTER



MODEL:WD-001

PRODUCT SPC: 220-240V ~50/60HZ 600-700W GS/CE

USER INSTRUCTIONS

Please keep these instructions

- This appliance can be used by aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge if they have been given supervision or instruction concerning use of appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years .
- **Warning: If toast of small bread slices than 85mm length, you must pay attention to the potential risk of burning when taking out the slices .**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These include the following:

- READ ALL INSTRUCTIONS
- Do not place any part of this toaster in water or any other liquid.
- To protect against electrical shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
- Prior to first use, the toaster should be used for a few minutes without bread in it. There will be some smoke at first ; this is entirely normal.
- Do not touch the hot surface. Use handles or knobs.
- Unplug from outlet when not in use and before cleaning. Allow to cool before
- Putting on or taking off parts.
- If the cord is damaged, it must be replaced by the manufacturer or by an authorized technical service.
- Do not use outdoors.
- Keep the toaster out of reach of children.
- Use only pre-sliced bread.
- Do not insert oversized foods, metal foil packages, or metal utensils into the toaster. This may result in electric shock.
- Do not use the toaster near curtains, upholstery or other decorative fabrics, as they can easily catch fire and cause a safety hazard.
- Do not remove food from the toaster while the plunger is down.
- Do not remove the crumb tray while the toaster is plugged in. Disconnect from power supply, wait for it to cool, then remove the crumb tray.
- Bread may burn. Therefore toasters must not be used near or below curtains and other combustible materials. They must be watched.
- The temperature of accessible surfaces may be high when the appliance is operating.
 - a) A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
 - b) Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
 - c) If a longer detachable power-supply cord or extension cord is used,
 - 1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance, and
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is

intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Avoid contacting moving parts.

PLEASE KEEP THESE INSTRUCTIONS

Note this appliance is intended for household use only.

SAVE THESE INSTRUCTIONS

MAIN COMPONENTS

- A. Start control
- B. Frozen
- C. Reheat
- D. Cancel
- E. Timing control
- F. Crumb tray



OPERATION

- Place your toaster on a flat, dry, stable surface.
- Plug the toaster in, and adjust it to your required toasting time, using the Timing control (E)
- Place bread or other food suitable for toasting into the slot, then press down the start control /plunger (A);
- It will remain down until the bread is toasted. The logo will be displayed on the bread.
- If you wish to stop the toasting process, press the Cancel button (D). this will automatically eject the toast, and cancel the heating elements.
- If the bread sticks in the toaster, unplug it, wait for it to cool, then remove the bread. NEVER USE METAL UTENSILS TO REMOVE THE BREAD.
- After use, wipe away crumbs using a dry cloth.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- If the lead connecting the toaster to the power supply is damaged, it should only be replaced by a qualified service engineer or the toaster manufacturer.
- Always allow at least 1 minute's cooling time between cycles if toaster is being used more than once at a time.
- Must put in the bread when using, the toaster can not be used without bread.
- This toaster is only for home use.

CLEANING AND CARE INSTRUCTIONS—NOTE THE TOASTER SHOULD BE ALLOWED TO COOL COMPLETELY BEFORE CLEANING.

- Do not immerse in water.
- Unplug from the power outlet (mains).
- DO NOT use coarse or abrasive sponges/cloths or steel wool to clean the toaster.
- Never spray or apply cleaner directly onto or into the toaster – cleaner should be applied to a soft cloth.
- The outside of the toaster should be wiped with a soft, damp cloth, and polished with a soft, dry cloth.
- After cleaning, wait a few minutes for the toaster to dry completely before use.
- An authorized service representative should perform any other servicing.



"THE DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT WASTE PRODUCTS ON THE PART OF FINAL USERS IN THE EUROPEAN UNION"

This symbol on the product or on the container indicates that this product cannot be eliminated with the general waste. The user is responsible for eliminating this kind of waste by throwing them away at a "recycling point" specifically for electrical and electronic waste. Selective collection and electrical equipment recycling contribute to preserve natural resources and warrant waste recycling to protect environment and health. In order to receive further information about electrical and electronic waste collecting and recycling, contact your Local Council, the service of household waste or the establishment where the product was acquired."

Remark: This appliance is not intended for use by persons(including children) with reduced physical , sensory or mental capabilities , or lack of experience and knowledge , unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety .Children should be supervised to ensure that they do not play with appliance .