


NINGBO JIAQI IMP. & EXP. CO., LTD.


GB 2001 Micro Torch and Attachment - Operating Instructions

- Familiarize yourself with the parts of your GB2001 Micro Torch before operating it.
- It should be handled by literate adults, or under constant adult supervision.
- It is essential that the following operating procedures be read and understood before attempting to light or use the GB2001 Micro Torch.
- These procedures must be carefully observed in order to promote safe usage.

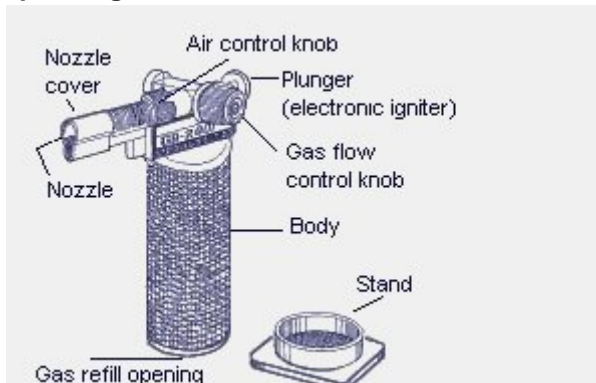


Igniting and Shutting-Off your GB 2001 Micro Torch

- Remove the protective cap from the trigger and the gas control knob of your GB 2001 Micro Torch.
- Slowly turn the gas flow control knob to the left (Counter Clock Wise) and the butane gas will start to flow.
- Push the ignition lever forward and the gas will be ignited electronically with a snapping sound.
- For shut-off, turn the gas flow control knob to the right (Clock Wise) and close it securely.

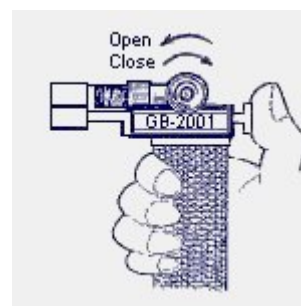


Thermal Power and Flame Control of your GB2001 Micro Torch

- Adjust the thermal power level and the length of the flame to suit usage objectives.
- The highest temperature attainable will be about 1,300 degrees Celsius.
- Both the gas control knob and the air control knob can be used to regulate the flame.
- After ignition, turn the air control knob either to the right or left for necessary thermal power adjustments. Closing the air inlet will produce a low temperature yellow flame, while fully opened the micro torch produces a sharp, high temperature .
- After ignition, do not leave the GB2001 Micro Torch burning longer than 1 hour continuously.

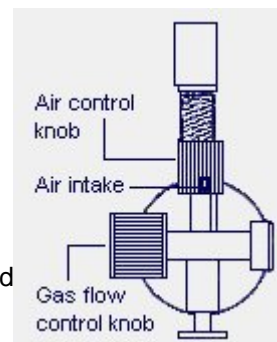

Refilling your GB2001 Micro Torch

- For detailed instruction, refer to our [Refilling Section](#).

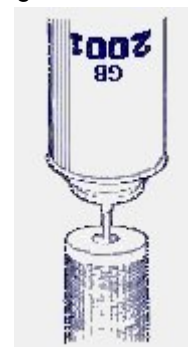

NINGBO JIAQI IMP. & EXP. CO., LTD.

Safety and Handling Precautions regarding the [GB2001 Micro Torch](#)

- For a detailed overview of safety, storage and handling instructions, please refer to our [Safety & Storage](#) Section.

Contact Us : Email: nbjiaqi@yaoo.com.cn

Tel:0086-574-27833591 Fax:0086-574-27833593

Contact person: Jacky

Website: <http://www.microtorch.com.cn>